

# Aura series getting started guide


## Please read before use

Reminder: Aura is a new smart scanner; ver	y different to tradition	ial equipment.	. You must read	l this
getting started guide to become a pro quick	y.			

## 1. Assembly

- 1. Take out the Aura scanner, <u>black work mat</u>, and other accessories.
- 2. Place Aura on a flat surface. Align the notch on the <u>black work mat carefully</u> with the base of Aura.



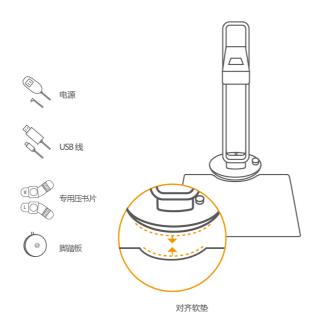

## 2. Mode descriptions

Aura has 2 modes: Table Lampand Scanner.

Long press knob for 1s: switch on/off

Short press knob: switch between Table Lamp and Scanner mode.

#### 3. Table Lamp mode

- 1. Connect the power and wait for the power indicator light <u>to turn</u> on. Long press the <u>knob</u> for 1s to enter <u>Table</u> Lamp mode by default.
- 2. The table lamp brightness <u>has</u> 6 <u>levels</u>. Turn the knob to change the brightness.
- 3. You can control the lamp with your phone (turn on/off and adjust the light settings of the lamp). Scan the QR code to download the CZUR app; register and add "Aura" functions to control the lamp.


#### 4. Scanner mode

- 1. In Table Lamp mode, short press the knob to switch to Scanner mode.
- 2. Download and install the CZUR Aura software on your computer. Official website download link: <a href="www.czur.com">www.czur.com</a> (Windows users can \_install from the in\_box CD).
- 3. Connect Aura to the computer through the in-box USB cable. Connect the foot pedal to Aura.
- 4. Run the CZUR Aura software. Configure the scanning settings. Use the foot <u>pedal</u> to start scanning.




大连成者科技有限公司 CZUR TECH CO., LTD.

5. Scanned files will be saved on the local drive. (You can customize the save destination.)

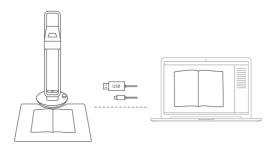

#### 5. Smart scanning description

- 1. Aura is not only able to scan single sheet documents and cards; it can even scan bound business contracts, books, files, etc.
- 2. Aura processes the scanned paper in 3 modes: (1) "Flat Singe Page"; (2) "Facing Pages"; (3) "Manual Selection".
- 3. <u>Aura has different ways of smart processing</u> depending on the <u>document</u>. It will automatically optimize image processing depending on the paper <u>layout</u>.

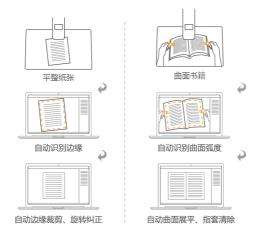

#### 6. Special instructions


- 1. When scanning, prevent strong ambient light from interfering with the laser<u>lines</u>. (For example, keep away from windows with direct <u>sunlight</u>.)
- 2. Correct placement of the black work mat: The black work mat at must cover the entire display



大连成者科技有限公司 CZUR TECH CO., LTD.

area so that the edges do not show (picture A).

- 3. Try to center the scanned paper to get the best scan quality (picture A).
- 4. <u>Three laser lines</u> will turn on every time you scan. When the laser <u>lines turn</u> off, then the scan is completed. Keep the paper still while the laser <u>lines are</u> on (picture A).
- 5. When scanning "<u>Facing Pages</u>" (bound papers), you should use the <u>finger cots</u> to <u>avoid</u> finger marks, and the correct <u>holding</u> method must be used (picture B).

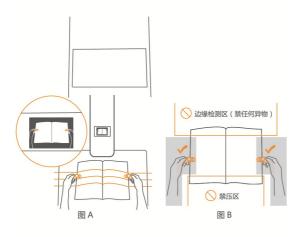

## 7. Frequently asked questions

- 1. Aura uses UVC standard protocols and is classified as <u>a</u> standard driverless device. If the device <u>is not</u> recognized by the computer, you can try the following troubleshooting methods:
  - 1) Turn Aura <u>off, disconnect power adapter,</u> then <u>power</u> back on after it is connected to the computer.
  - 2) Restart Aura; reconnect the USB cable.
  - 3) Switch to another USB port on the computer.
  - 4) Close anti-virus software, security, and back end defensive software on the PC.
  - 5) Check\_"device manager" on the PC. If the yellow exclamation mark/unknown device appears, right click to update the drivers or disable then re-enable the device. Restart the CZUR Aura software, then try again.
  - 6) Restart the computer or use another computer.

If you have any problems during use, please read the in\_box manual or visit the official website (www.czur.com) support page to get the more detailed manual.



大连成者科技有限公司 CZUR TECH CO., LTD.

CZUR TECH CO., LTD.

9F, North Wing, West Block, Shenzhen Hong Kong Institution, Gaoxin South 7th Road, Nanshan District, Shenzhen, 518057, China

Room 911, Building A, Venture Building, No. 32, Torch Road, Gaoxin Park, Dalian, China

Support Email: support@czur.com

Website: www.czur.com